DL 6250 -ml

Köksfläkt
Ventilator
Liesituuletin
Emhætte
Cooker Hood

Instruktionsbok
Bruksanvisning
Käyttöohje
Brugsvejledning
Operating and Installation Instructions

S	Innehållsförteckning	2
N	Innholdsfortegnelse	13
FIN	Sisällysluettelo	24
DK	Indholdsfortegnelse	35
UK	Contents	47

Contents

Safety instructions 47
Description of the cooker hood 48
Using the cooker hood 49
Maintenance and cleaning 50
If the cooker hood will not operate 53
Technical data 55
Installation 55

⚠ Safety instructions

This appliance is to be used solely as a household appliance. It has been manufactured according to the international safety and quality standards. Note that the safety devices alone are not capable of eliminating all accident risks.
It is therefore very important to carefully read all the operating instructions, recommendations and warnings prior to installation and use of the appliance. Note in particular the text paragraphs with the danger triangle design, to avoid damages to persons or objects.
Keep this instruction booklet in a safe place: this booklet should always accompany the appliance at such time as it is sold or given to other persons for use.

Installation and service

- Any electrical installation of the cooker hood must be carried out by a qualified electrician and the hood itself must be installed by someone with experience. Installation made by an unqualified person can lead to loss of function of the cooker hood and possible damage to person and and/or property.
- The cooker hood must be at least 60 cm above electric hobs or electric ranges, or at least 65 cm above gas burners or gas ranges.
- Ensure that the power cable is not damaged during installation.
- The cooker hood is only in stand by mode unless the plug or the fuse is disconnected.
- The cooker hood cannot be connected to flues of other appliances that run on energy sources other than electricity. Please, keep to the provisions of official directives regarding fume discharge.

Use of cooker hood

- This appliance is for domestic use only in a normal household.
- Never leave any deep-frying, melting fat, paraffin or any other inflammable liquid unattended on the hob. In the event of fire: Immediately switch off the cooker hood and the cooker. **Note! Cover the fire. Never use water.**
- Never do any flambé cooking underneath the cooker hood. It can cause a fire. Remember that overheated fat may spontaneously ignite. Never leave the frying pan unattended.
- It is essential that the grease filter is regularly cleaned to help avoid fat dripping on to the hot zone and causing a fire. Read the section on "Maintenance and Cleaning" in the instruction book.

Disposal

- Prevent accidents when disposing of your cooker hood. Disconnect the power plug from the wall socket and cut the power cord at the hood inlet.Contact your local authority for information on where to dispose the cooker hood.

Description of the cooker hood

Functions

There are two possible systems:

- Extraction of air to the outside using an optional venting kit and evacuation duct.
- Recirculation using an optional carbon filter.

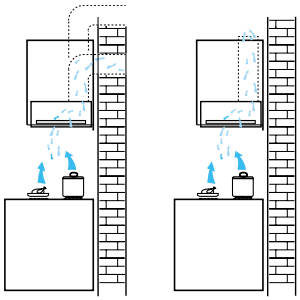

Fig. 1

Accessories

The following are included with the cooker hood.

- 1 hood canopy complete with controls, lighting and fan motor.
- 1 Adaptor Ø 120 mm.
- 1 Adaptor Ø 120-100 mm.
- 1 plastic bag containing: documentation, screws to fix the hood.

The following can be ordered from your retailer:

- Charcoal filter, KFL 60/80 (should be replaced every year).

or

- Charcoal filter, KF8 (typ 150 – can be regenerated and should be replaced every 3 years).

The carbon filter is to be used when the hood is connected to the recirculation mode.

Using the cooker hood

The control panel

Best results are obtained by using a low speed for normal conditions and high speed when odours are more concentrated.
Turn the hood on a few minutes before you start cooking then you will get an underpressure in the kitchen. It should be left on after cooking for about 15 minutes or until all odours have disappeared.The switches are located on the right-hand side of the hood.

- the **light switch** switches the hood lamp on and off.
- the **motor switch** switches the cooking smoke and vapour extractor motor on and off, enabling you to select the speed.

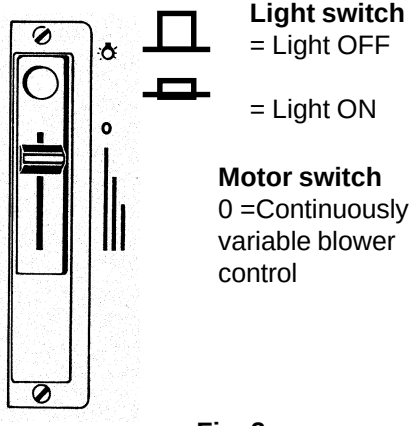

Light switch
= Light OFF

= Light ON

Motor switch
0 =Continuously variable blower control

Fig. 2

Correct ventilation

If the cooker hood is to work correctly there must be an underpressure in the kitchen. It is important to keep the kitchen windows closed and have a window in an adjacent room open.

Important to know

Not applicable for recirculation. Great care must be taken if the hood is used at the same time as a burner or fireplace (e.g. gas, diesel, coal or wood heaters, water heaters, etc.), as the hood will expel air which is required by these other appliances. Attend to it by opening a window. The negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the cooker hood.

Maintenance and cleaning

Disconnect the cooker hood from the power supply prior to cleaning the appliance, either by removing the plug from the mains or removing the fuse.

Clean the filter regularly. The grease deposits in the filter and discharge tube are fire hazards where a hotplate (or another heat source) is left on by error.

Cleaning the hood

Clean the outside of the hood using a damp cloth and a mild detergent.
Never use corrosive, abrasive or flammable cleaning products.

Cleaning the grease filters

Clean the filter every month or every other month according to how much the hood is used. The cleaner the filters, the more grease they collect. To remove the filters:

- Press the handle Q that locks the grease filter N first towards the opposite side and then extract downwards. **Fig. 3**.

The filter is made of aluminium wires on which the grease collects. Clean the filter in hot water using a detergent, or in a dishwasher. Let the filter dry before putting it back. Note that a dishwasher may discolour the filter.

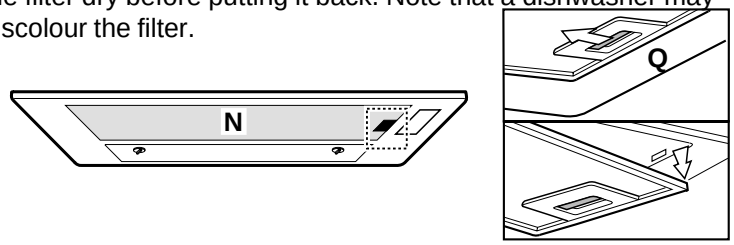

Fig. 3

Carbon filter

- The activated carbon filter should only be used if you want to use the hood in its filtering function.
- To do this you will need an original AEG activated carbon filter (see special accessories).
- The carbon filters absorb smells and odours.

- **Changing and cleaning the carbon filter - KF 8**
  Unlike other carbon filters, the LONGLIFE carbon filter can be cleaned and reactivated. At normal use the filter should be cleaned every second month. The best way to clean the filter is in the dishwasher. Use normal detergent and choose the highest temperature (65º C). Wash the filter separately so that no food parts gets stuck on the filter and later causes bad odours. To reactivate the carbon, the filter should be dried in an oven for 10 minutes with a temperature of maximum 100º C.
  After approximately three years of use, the KF8 filter should be replaced with a new, as the odour reduction capacity will be reduced.
- **Replacing the carbon filter - KFL 6080**
  The activated carbon filter must normally be replaced at least once every year. This filter cannot be washed or regenerated.
  To guarantee proper absorption of odours the working volume of the activated carbon must be proportionate to the hood air flow. In this case the high quality of the activated carbon will ensure efficient odour removal for approximately one year, assuming that the hood is used normally. For this reason you should always use original AEG filters only, making sure they are replaced when necessary.
- **Mounting**
  Remove the grease filter.
  Apply active carbon filter KLF 60/80, special accessory E-Nr.:610 899 421 on the lamp side, press in both red lugs on the carbon filter, and unclip the carbon filter forwards (towards the front edge of the appliance).
  Refit the grease filter.
- **To dismount** press both red lugs and remove the carbon filter downwards.
- Always specify the hood model code number and serial number when ordering replacement filters. This information is shown on the registration plate located on the inside of the unit.
- The activated carbon filter can be ordered from the AEG technical assistance service.

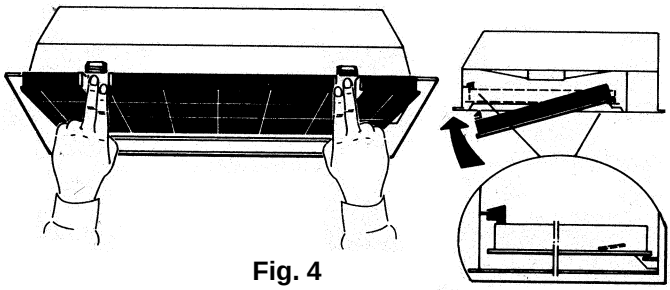

Fig. 4

Changing the light bulb

- Disconnect the unit from the mains power supply.
- Unlock the lighting cover by twisting the bolts to the left and fold down the bulb cover.
- Replace the old light bulb with a new light bulb of the same kind.
- Close the bulb cover and relock it by twisting the bolts to the right.
- If the light does not come on, make sure the bulb has been inserted in correctly before contacting the technical assistance service.

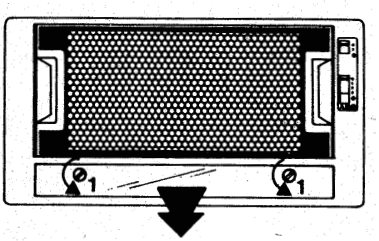

Fig. 5

If the cooker hood will not operate

Check the following prior to calling after sales service:

- Has a fuse burnt? Check both fuses and replace if necessary.
- Is the power supply plug inserted properly in the power outlet?
- Has the flexible tube been mounted correctly?
- Is the anti-grease filter clean?
- Are the light bulbs intact and soundly fitted?

If the problem persists, contact the sales center, the after sales service center or an authorized technician. Only use original spare parts. Under no circumstances carry out modifications to the cooker hood which may cause harm to persons and/or damage objects.

After sales service and spare parts

It is important to always indicate the appliance product number and model type when requesting after sales service or ordering spare parts. This information is indicated on the motor casing label.

Guarantee conditions

Guarantee Conditions

AEG offer the following guarantee to the first purchaser of this appliance.

1. The guarantee is valid for 12 months commencing when the appliance is handed over to the first retail purchaser, which must be verified by purchase invoice or similar documentation.The guarantee does not cover commercial use.
2. The guarantee covers all parts or components which fail due to faulty workmanship or faulty materials. The guarantee does not cover appliances where defects or poor performance are due to misuse, accidental damage, neglect, faulty installation, unauthorised modification or attempted repair, commercial use or failure to observe requirements and recommendations set out in the instruction book.This guarantee does not cover such parts as light bulbs, removable glass-ware or plastic.
3. Should guarantee repairs be necessary the purchaser must inform the nearest customer service office (manufacturer`s service or authorised agent). AEG reserves the right to stipulate the place of the repair (i.e.the customer`s home, place of installation or AEG workshop).
4. The guarantee or free replacement includes both labour and materials.
5. Repairs carried out under guarantee do not extend the guarantee period for the appliance. Parts removed during guarantee repairs become the property of AEG.
6. The purchaser`s statutory rights are not affected by this guarantee.

European Guarantee

If you should move to another country within Europe then your guarantee moves with you to your new home subject to the following qualifications:

- The guarantee starts from the date you first purchased your product.
- The guarantee is for the same period and to the same extent for labour and parts as exist in the new country of use for this brand or range of products.
- This guarantee relates to you an cannot be transferred to another user.
- Your new home is within the European Community (EC) or European Free Trade Area.
- The product is installed and used in accordance with our instructions and is only used domestically, i.e. a normal household.
- The product is installed taking into account regulations in your new country.

Before you move please contact your nearest Customer Care Centre, listed below, to give them details of your new home. They will then ensure that the local Service Organisation is aware of your move and able to look after you and your appliances.

France	Senlis	+33 (0) 44 62 29 29
Germany	Nürnberg	+49 (0) 800 234 7378
Italy	Pordenone	+39 (0) 800 117 511
Sweden	Stockholm	+46 (0) 8 672 5360
UK	Slough	+44 (0) 1753 219899

Technical data

Size	Height	14,2 cm
	Width	54,8 cm
	Depth	28,5 cm
Light		1x11 W
Grease filter		1 st.
Voltage		230 V
Total power		295 W

Extra accessories:

Charcoal KLF 60/80	E-Nr.	610 899 421
Charcoal KF 8		942 120 399

Installation

Unpacking

Check that the cooker hood is not damaged. Transportation damages should immediately be reported to the transport company. Damages, faults and missing parts should immediately be reported to the retailer. Dispose carefully of the packaging material so that it is out of the way of small children.

Position

The cooker hood should be mounted freely hanging on the wall. The cooker hood must be at least 60 cm above electric hobs or electric ranges, or at least 65 cm above gas burners or gas ranges.

The cooker hood cannot be connected to flues of other appliances that run on energy sources other than electricity. Please, keep to the provisions of official directives regarding fume discharge.

Electrical connection

The hood has a power cable with earth connection and the rated voltage is 230 V.

Mounting the cooker hood - Fig. 6

- Drill the base of the wall unit to allow for passage of the hood body. Fig. 9.1.
- Drill the top of the wall unit to allow for passage of the exhaust pipe and the electrical cable. Fig. 9.1.
- Remove the grease filter (1).
- Remove the grease filter support frame, by pressing the two spring clamps located at the sides of the frame (2).
- Through the top of the wall unit, insert a pipe with a diameter of 120mm or 125mm at the connection ring (3).
- Fit the connection ring Ø120 mm or Ø125 mm on the hood exhaust outlet (4) and fasten it to the exhaust pipe.
- Insert the body of the hood into the hole in the base of the wall unit (5) – check the position of the exhaust pipe and the electrical cable, press firmly so that the anchor springs (6) engage above the bottom of wall unit. Tighten the screws in the anchor springs firmly.
- If necessary the hood can be fastened with four more screws (7).
- Replace the grease filter support frame.
- Replace the grease filter.

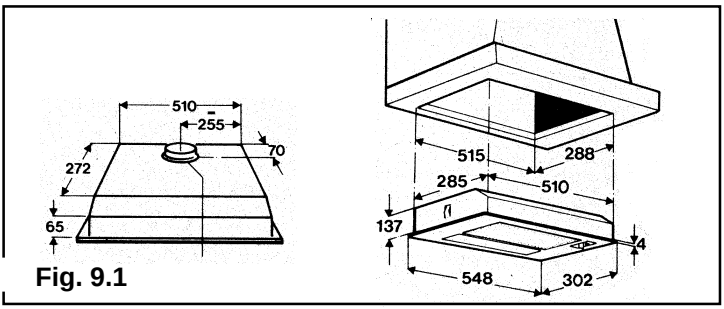

Fig. 9.1

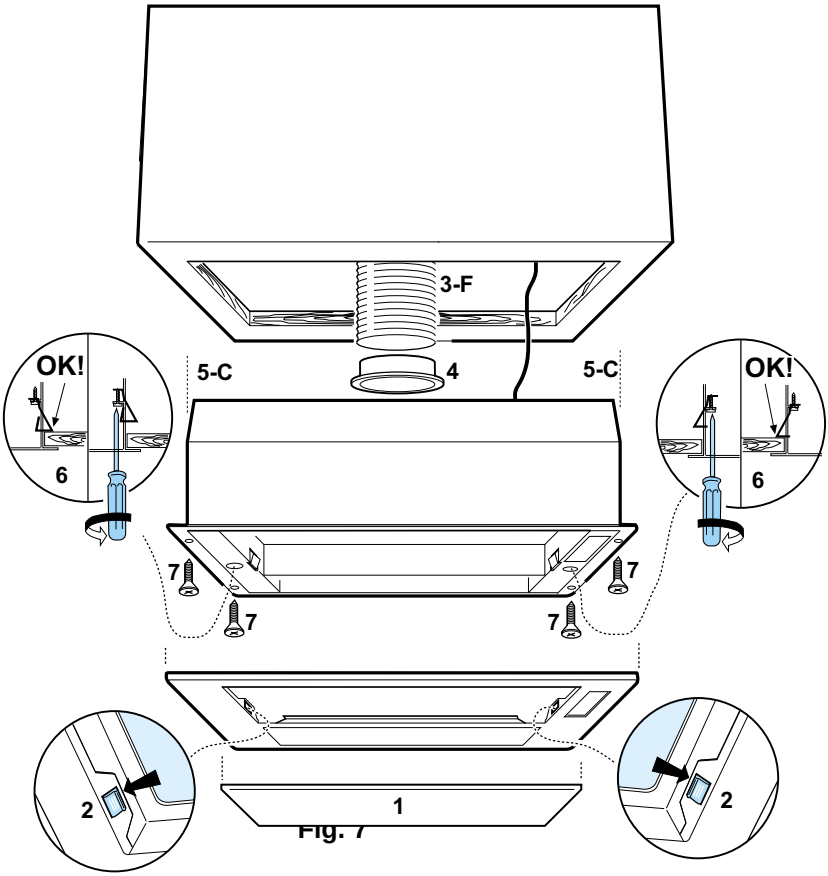

Fig. 7

Fig. 6

Removing the hood from cabinet

Follow these steps:

- Remove the grease filter.
- Remove the 4 additional screws from the frame.
- Loosen the screws on the two fixing springs. Fig. 8.

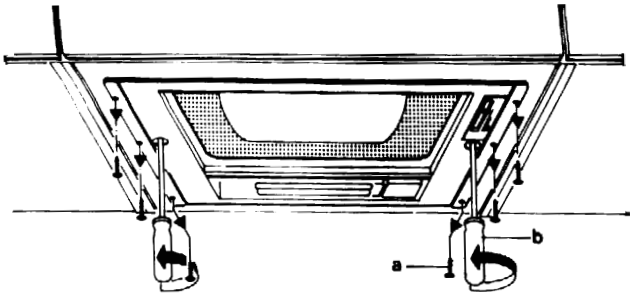

Fig. 7

- Push a flat screwdriver into the hole for the fixing springs (right and left) and push each of the fixing springs inwards. **Fig. 9**.
- At the same time, pull the extractor hood (right and left) out of the cabinet.

Re-install it as described above.

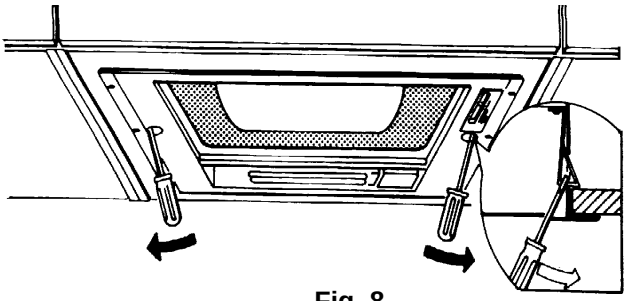

Fig. 8

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

http://www.aeg.hausgeraete.de

© Copyright by AEG

LI1WBB Ed.05/02